NURF PRO TC 1.0mL

iKrusher

FILLING INSTRUCTIONS

01



- Unpackage the product, make sure you have both the mouthpiece and the cartridge ready.
- Do not remove the silicone gasket during the filling process.
- Place the tank vertically upright on a tray.

02



- Pre-heat the oil to ⩽ 122 degrees Fahrenheit.
- Fill the oil with a syringe or a machine, the recommended needle size is Gauge 15 (or ⩽2.0mm).
- Fill the oil according to the tank capacity through the open filling space.
- When using a needle, insert it to a depth of 2/3 of the oil tank and do not touch the bottom.

03



***Press machine recommended**

- Cap the mouthpiece onto the cartridge, make sure it is vertical to the tank and forced evenly.
- Do this within 1.5 minutes after filling the oil. For thinner consistencies, please cap it sooner to prevent leaking.

After Filling

(*If you are using Live Resin or Live Rosin, please skip this step.)

- After filling and capping, invert the cartridge upside down to ensure the oil cools away from the coil. This is to prevent leakage.
- Once the cartridge has been flipped upside down for 36 hours, flip it right side up for another 36 hours. This allows the oil to fully saturate the coil and to avoid potential dry hits.
- Store the final product in a dry, cool place that avoids direct sunlight. Storage temperatures should be between 68-77 degrees Fahrenheit.



Additional Info

- Once it is filled, you will notice a difference in volume as the ceramic coil absorbs the oil. This will create a headspace in the oil tank, with a potential reduction of up to 10%.
- For Consumers Only: After opening, please finish this product within 2 weeks for the best experience.

NURF PRO TC 2.0mL

iKrusher


FILLING INSTRUCTIONS

01



- Unpackage the product, make sure you have both the mouthpiece and the cartridge ready.
- Do not remove the silicone gasket during the filling process.
- Place the tank vertically upright on a tray.

02

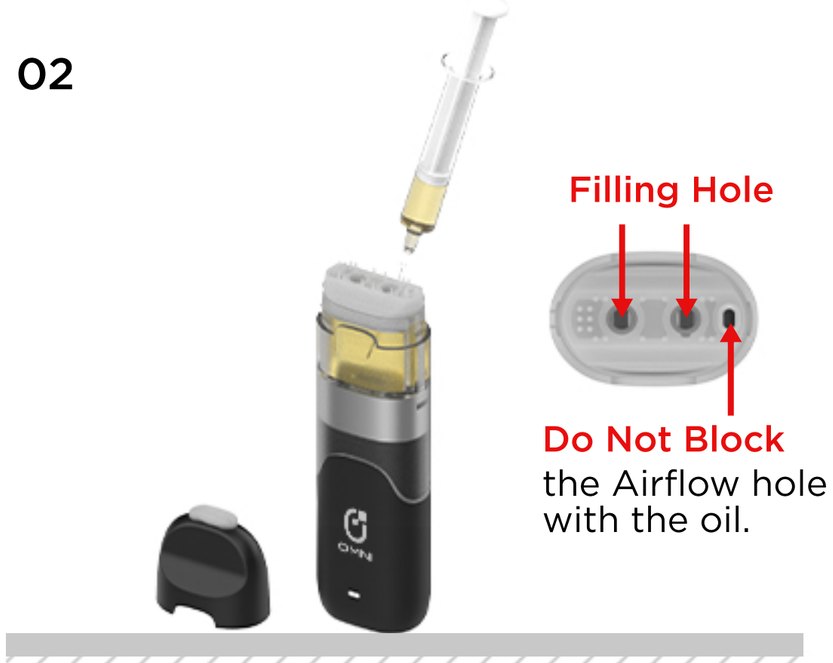

- Pre-heat the oil to ⩽ 122 degrees Fahrenheit.
- Fill the oil with a syringe or a machine, the recommended needle size is Gauge 15 (or ⩽2.0mm).
- Fill the oil according to the tank capacity through the open filling space.
- When using a needle, insert it to a depth of 2/3 of the oil tank and do not touch the bottom.

03



***Press machine recommended**

- Cap the mouthpiece onto the cartridge, make sure it is vertical to the tank and forced evenly.
- Do this within 1.5 minutes after filling the oil. For thinner consistencies, please cap it sooner to prevent leaking.

After Filling

(*If you are using Live Resin or Live Rosin, please skip this step.)

- After filling and capping, invert the cartridge upside down to ensure the oil cools away from the coil. This is to prevent leakage.
- Once the cartridge has been flipped upside down for 36 hours, flip it right side up for another 36 hours. This allows the oil to fully saturate the coil and to avoid potential dry hits.
- Store the final product in a dry, cool place that avoids direct sunlight. Storage temperatures should be between 68-77 degrees Fahrenheit.



Additional Info

- Once it is filled, you will notice a difference in volume as the ceramic coil absorbs the oil. This will create a headspace in the oil tank, with a potential reduction of up to 10%.
- For Consumers Only: After opening, please finish this product within 2 weeks for the best experience.